 


dorien

2 IN 1 BLENDER WITH GRINDER

INSTRUCTION MANUAL

MODEL: DB-15

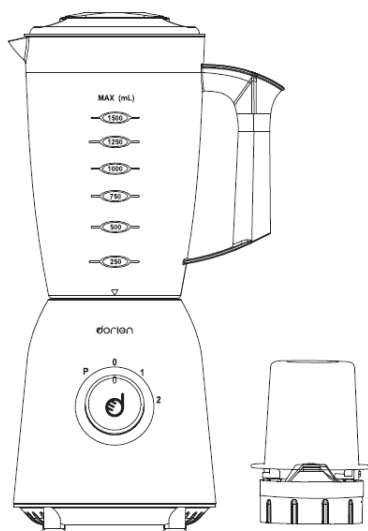

General Safety Precautions


1. Please read this instruction booklet carefully before operating the appliance.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
3. Children should be supervised to ensure that they do not play with the appliance.
4. Always operate the appliance from a power source with the same voltage and frequency as indicated on the rating label.
5. Place the appliance on a stable, flat, and dry surface away from the edge of countertops.
6. Do not use the appliance in damp or wet areas.
7. Do not operate the appliance if the power cord, plug, or any part of the appliance is damaged. Return it to an authorized service center for examination and repair.
8. Do not place the appliance on or near hot surfaces such as gas or electric burners, hotplates, or heated ovens.
9. Use only accessories supplied or recommended by the manufacturer.
10. Ensure the blender jar is correctly assembled and securely locked onto the motor base before operation.
11. Always fit the lid securely onto the blender jar before switching on the appliance.
12. Ensure the lid remains firmly closed during operation.
13. Hold the lid while blending to prevent accidental opening.

14. Start blending at the lowest speed setting and gradually increase the speed as required.
15. Do not exceed the maximum capacity indicated on the blender jar.
16. Never leave the appliance unattended while in operation.
17. Wait until the blades have completely stopped before removing the blender jar or grinder cup.
18. Switch off and unplug the appliance before cleaning, assembling, disassembling, or when not in use.
19. Always hold the plug when unplugging. Never pull the power cord.
20. To reduce the risk of electric shock, do not immerse the appliance, power cord, or plug in water or any other liquid.
21. This appliance is intended for household use only. It is not suitable for commercial use.

Specification

MODEL:	DB-15
POWER:	220-240V~
RATED VOLTAGE:	300-350W
FREQUENCY:	50/60Hz
Blender Capacity	1500 ml
Grinder Capacity	50 g

Parts Identification

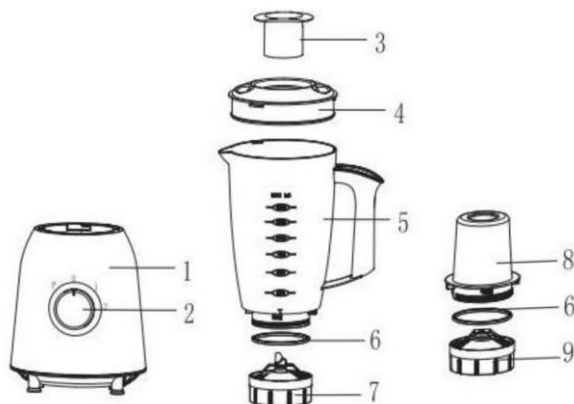


1.	Main Body	6.	Silicone Sealing Ring
2.	Control Knob	7.	Blender Blade Assemble
3.	Measuring Cup	8.	Grinding Cup
4.	Lid	9.	Grinder Blade Assemble
5.	Blender Jar		

Before First Use

1. Remove all packaging materials.
2. Wash the blender jar, lid, measuring cup, grinding cup, and removable blade assemblies with warm soapy water.
3. Rinse thoroughly and dry completely before use.
4. Ensure all parts are properly assembled before operating.

Operating Instructions

How to use the Blender

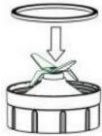Assembly 1. Ensure the silicone sealing ring is properly fitted onto the blender blade assembly.	
2. Attach the blade assembly securely to the blender jar. 3. Place ingredients into the blender jar. Important: • Ingredient size should not exceed 2 cm x 2 cm x 2 cm. • Do not exceed the maximum capacity marking.	
4. Fit the lid securely onto the jar. 5. Insert the measuring cup into the lid.	
6. Place the blender jar onto the motor base and lock it into position. 7. Plug the appliance into a suitable power outlet.	

8. Turn the control knob to the desired speed:

- a. Position "1" for low speed.
- b. Position "2" for high speed.
- c. Position "P" for pulse operation.

Note: The switch does not permanently engage in the "PULSE" setting. You have to hold the switch in the "PULSE" or turn it repeatedly.


9. Blend ingredients until the desired consistency is achieved.

Operating Time:

- Do not operate continuously for more than 10 minutes.
- Allow the motor to cool for at least 15 minutes seconds between cycles.

If the Blender Becomes Stuck

- 1. Switch off the appliance immediately.
- 2. Unplug from the power outlet.
- 3. Remove excess ingredients if necessary.
- 4. Reassemble and restart.

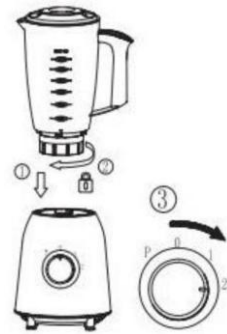

How to use the Grinder

Assembly

1. Place dry ingredients into the grinding cup.
2. Secure the grinder blade assembly onto the grinding cup.
3. Mount the assembled grinding cup onto the motor base.



Grinding


1. Plug the appliance into the power outlet.
2. Turn the control knob to the desired setting or use the Pulse function.
3. Grind until the desired texture is achieved.

Operating Time:

- Do not operate continuously for more than 30–45 seconds.
- Allow the appliance to rest for at least 120 seconds before restarting.

Important Notes

- If ingredients are not contacting the grinding blades, switch off and unplug the appliance.
- Shake the grinding cup gently and restart.

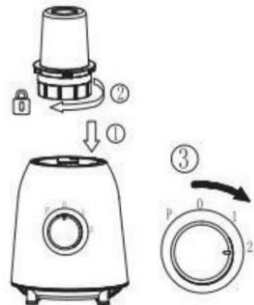

- | | |
|--|--|
| <ul style="list-style-type: none">• Do not remove the grinding cup until the motor and blades have completely stopped. | |
|--|--|

Safety Features

The circuit breaker is to protect the electric motor from overheating. When overheating occurs, the circuit breaker will be activated and the power will be cut off. The circuit breaker will be de-activated for normal use again when the temperature of the electric motor drops to a low temperature, usually after 30 minutes.

The safety interlock switch ensures that the blender jar or grinder jar sits on the motor base correctly before the appliance can be operated.

Care and Cleaning

Cleaning the Blender Jar

1. Fill the jar with approximately 400–700 mL of water.
2. Add a few drops of mild liquid detergent.
3. Fit the lid securely.
4. Operate using the Pulse function for several seconds.
5. Empty the jar and rinse thoroughly.

General Cleaning

1. Wash removable parts with warm soapy water after each use.
2. Rinse thoroughly and dry completely.
3. Clean the motor housing with a soft damp cloth.

Warning:

- Never immerse the motor base in water or any other liquid.
- Do not use abrasive cleaners, steel wool, or sharp objects for cleaning.

Storage

1. Ensure all parts are clean and dry.
2. Reassemble the appliance.
3. Store in a cool, dry place away from direct sunlight.

Troubleshooting

Problem	Possible Cause	Solution
Appliance does not operate	Not plugged in	Check power connection
Motor stops during use	Overload protection activated	Unplug and allow to cool
Excessive vibration	Ingredients too large	Cut ingredients into smaller pieces
Leakage from jar	Sealing ring incorrectly installed	Refit sealing ring properly

- Do not operate the appliance if it malfunctions or appears damaged.
- Return the appliance to the place of purchase or an authorized service center for inspection, repair, or replacement.
- Do not attempt to disassemble or repair the appliance yourself.
- There are no user-serviceable parts inside.

Distributed by:
SEGA APPLIANCES (M) SDN. BHD.
76, Jalan Tasik Prima 2/2, Taman Tasik Prima,
47150 Puchong, Selangor, Malaysia.
Tel: +60-14-2895236