 


dorien

CUPCAKE MAKER

INSTRUCTION MANUAL

MODEL: DCC-101

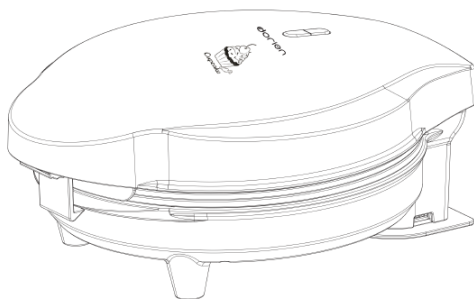

General Safety Precautions


1. Please read this instruction booklet carefully before operating the appliance.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
3. Children should be supervised to ensure that they do not play with the appliance.
4. Ensure that the voltage of your power outlet corresponds to the voltage stated on the appliance's rating label.
5. Always place appliance on a sturdy surface.
6. High temperature is generated during use, which may result in burns or other injuries.
7. Always switch off the power at the outlet before inserting or removing the plug. When unplugging, grasp the plug—do not pull on the cord.
8. Never leave the appliance unattended while in operation.
9. Use the appliance only for its intended purpose.
10. Do not allow the power cord to hang over the edge of a table or countertop, or to come into contact with hot surfaces.
11. Turn off the power and unplug the appliance when not in use and before cleaning.
12. If the power cord is damaged, it must be replaced by the distributor. Do not attempt to replace power cord yourself.

13. Only authorized service personnel allowed to undertake repairs on electrical appliances. Repairs undertaken by unauthorized persons may result in damage to the appliance and/or accidents or injury to the user.
14. Do not use the appliance with an extension cord unless it has been checked and approved by a qualified technician or service personnel.
15. Do not place the appliance on or near hot gas flames, electric elements, or other heated appliances.
16. Do not use the appliance outdoors or for commercial purposes.
17. Do not immerse the appliance, power cord, or plug in water or any other liquid.


Specification

MODEL:	DCC-101
POWER:	220-240V~
RATED VOLTAGE:	700W
FREQUENCY:	50/60Hz

Parts Identification

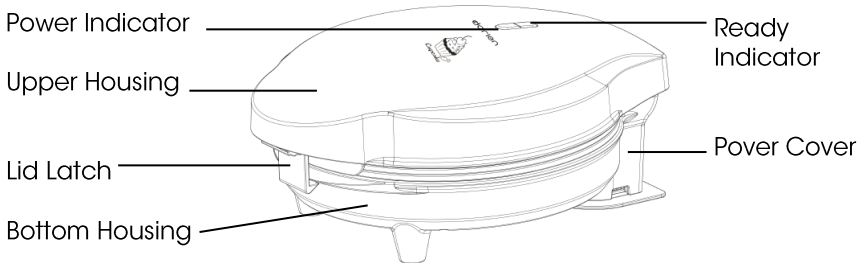

Internal Cooking Plates

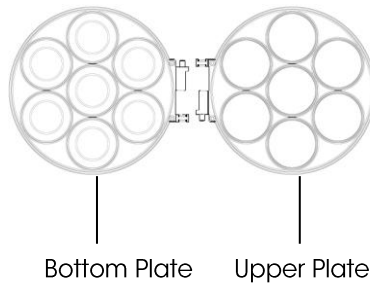

Before First Use

- Before using the appliance for the first time, remove all promotional and packaging materials. Ensure the cooking plates are clean and free from dust. If necessary, wipe with a damp cloth.
- For best results, apply a small amount of vegetable oil (approximately one teaspoon) onto the non-stick plates. Spread evenly with an absorbent kitchen towel and wipe off any excess.
- When the appliance is used for the first time, it may emit a slight amount of smoke or odor. This is normal for heating appliances and does not affect safety.

Operating Instructions

1. Insert the plug into the power outlet. The **power/ready indicator light** will illuminate, indicating that the appliance has started preheating.
2. Allow the Cupcake Maker to preheat until the ready indicator light (Green) turns off. This indicates that the correct cooking temperature has been reached.
3. Lightly grease the cooking plates with cooking oil spray before use to assist in easy removal of Cupcake.
4. Pour the batter evenly into the plate cavities using a jug, spoon, or piping bag.

Note: Do not use disposable plastic piping bags, as they may melt if they come into contact with hot surfaces.

5. Gently close the lid and ensure the latch is securely locked. Do not slam the lid, as this may cause the batter to spill.
6. Cook for approximately **3-5 minutes**, or until the Cupcake are golden brown.
7. Remove the Cupcake using a plastic or wooden spatula.
 - **Do not use metal or sharp objects**, as they may damage the non-stick coating.

Care and Cleaning

- Always switch off the appliance and unplug it before cleaning.
- Allow the appliance to cool completely before cleaning.
- The non-stick cooking plates require minimal cleaning. Wipe them with a soft damp cloth.
- Do not immerse the appliance in water or any other liquid.
- Do not use abrasive scouring pads, powders, or harsh cleaners.
- Do not place the appliance in a dishwasher.
- Before the next use, lightly grease the cooking plates to ensure easy release of Cupcake.
- For space-saving storage, the appliance can be stored in a vertical position.

Distributed by:
SEGA APPLIANCES (M) SDN. BHD.
76, Jalan Tasik Prima 2/2, Taman Tasik Prima,
47150 Puchong, Selangor, Malaysia.
Tel: +60-14-2895236