 


# dorien

## 10" STAND AIR CIRCULATOR

INSTRUCTION MANUAL

MODEL: DCF-09

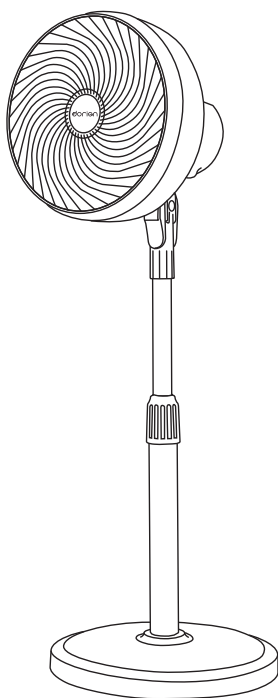

## General Safety Precautions

1. Please read this instruction booklet carefully before operating the appliance.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
3. Children should be supervised to ensure that they do not play with the appliance.
4. Always place the appliance on a flat and stable surface.
5. Ensure that the voltage indicated on the rating label corresponds with your mains power supply.
6. To prevent electric shock, do not immerse the appliance, power cord, or plug in water or any other liquid.
7. Do not touch any moving parts while the appliance is in operation.
8. Operate the appliance in a well-ventilated area. Ensure that the front and rear are not blocked, and maintain a minimum distance of 20 cm from walls or corners.
9. Do not operate the appliance if the motor housing is removed or damaged.
10. Unplug the appliance from the power outlet when not in use, before cleaning, when left unattended, or when moving it from one location to another.
11. The use of accessory attachments not recommended by manufacturer may cause fire, electrical shock, or injury.


12. Do not operate the appliance with a damaged cord or plug, or if it malfunctions or has been damaged in any way. Return the appliance to the distributor or an authorized service center for inspection, repair, or adjustment.
13. Do not use the appliance outdoors.
14. Do not allow the power cord to hang over the edge of a table or counter, or to touch hot surfaces.
15. Use the appliance only for its intended purpose.
16. Do not operate the appliance with wet hands.
17. Never insert fingers or any objects into any openings or guards of the appliance.
18. Do not place the appliance near or below curtains or similar materials.
19. If the power cord is damaged, it must be replaced by the distributor or an authorized service center. Do not attempt to replace the cord yourself.

### Specification

|                |           |
|----------------|-----------|
| MODEL:         | DCF-09    |
| POWER:         | 220-240V~ |
| RATED VOLTAGE: | 90W       |
| FREQUENCY:     | 50/60Hz   |
| BLADE SIZE:    | 190MM     |

## Parts Identification


1. Front Guard
2. Fan Blade Knob
3. Fan Blade
4. Rear Guard Mounting Knob
5. Safety Screw
6. Rear Guard
7. Motor Shaft
8. Rotary Switch
9. Oscillation Knob
10. Motor Housing
11. Fan Body
12. Fan Body Securing Screw
13. Extension Tube
14. Height Adjustment Knob
15. Stand Pole
16. Base
17. L Type Screw & Washer

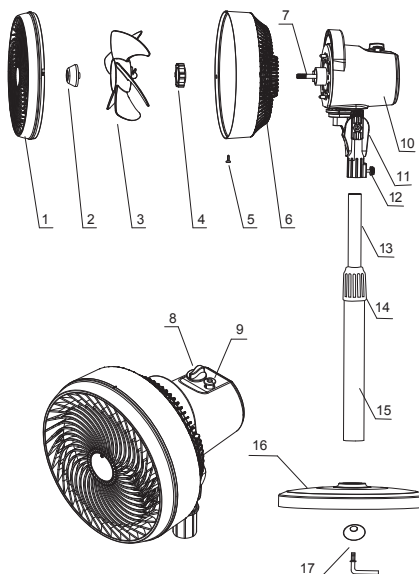



## Product Assembly

Please follow the steps below to assemble the appliance correctly:

1. Loosen the L-type screw and washer from the bottom of the stand pole.
2. Insert the stand pole into the base and secure it firmly using the L-type screw and washer.
3. Attach the fan body to the extension tube and lock it into position by turning the fan body securing knob clockwise.

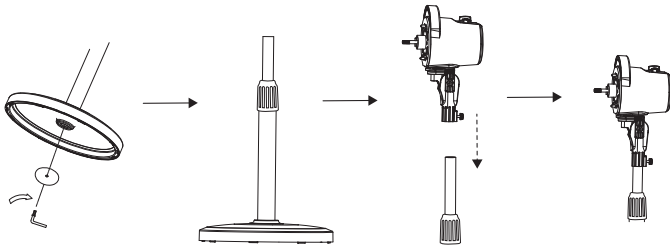

4. Fix the rear guard onto the front side of the motor housing. Secure it by tightening the rear-guard mounting knob clockwise until the rear guard is firmly in place. Do not over-tighten.
5. Install the fan blade onto the motor shaft and secure it with the fan blade knob.
6. Align the front guard with the rear guard using the top markings as a guide. Once aligned, rotate the front guard anti-clockwise to lock it in place, then tighten the safety screw located below the rear guard.

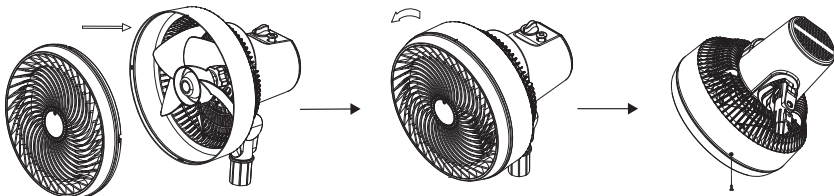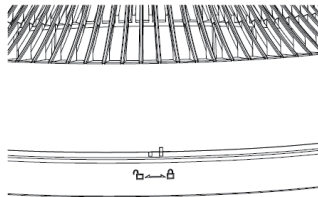

## Operating Instructions

Fan Speed and OFF:

|                                                                                   |                                       |
|-----------------------------------------------------------------------------------|---------------------------------------|
|  | The fan is switched off.              |
|  | The fan operates at the lowest speed. |
|  | The fan operates at the middle speed. |
|  | The fan operates at high speed.       |

### Side Oscillation

The oscillation knob is located on top of the motor housing.

- Press the oscillation knob down to enable side-to-side oscillation.
- Pull the knob up to stop the oscillation function.

### Tilt Adjustment

- Ensure the fan is switched off and the fan blade has come to a complete stop before adjusting.
- Hold the fan body firmly with one hand.
- Gently move the fan guard upward or downward with the other hand to achieve the desired angle.

## Height Adjustment

- Ensure the fan is switched off and the fan blade has completely stopped before adjusting.
- Hold the fan body firmly with one hand.
- Loosen the height adjustment knob with the other hand.
- Raise or lower the extension tube to adjust the height as desired.
- Tighten the height adjustment knob securely after adjustment.

## Care and Cleaning

- Always unplug the appliance from the power outlet before cleaning or disassembling.
- Do not allow water to drip onto or enter the motor housing.
- Do not use solvents such as gasoline, thinner, or benzene for cleaning.
- Clean the fan blade, front guard, and rear guard using a soft, damp cloth.
- Use a dry brush to remove dust and dirt from hard-to-reach areas.
- Ensure that all parts are completely dry before reassembling or using the appliance.

Distributed by:  
**SEGA APPLIANCES (M) SDN. BHD.**  
76, Jalan Tasik Prima 2/2, Taman Tasik Prima,  
47150 Puchong, Selangor, Malaysia  
Tel: +6014-2895236