


dorien

EGG ROLLS MAKER

INSTRUCTION MANUAL

MODEL: DER-102

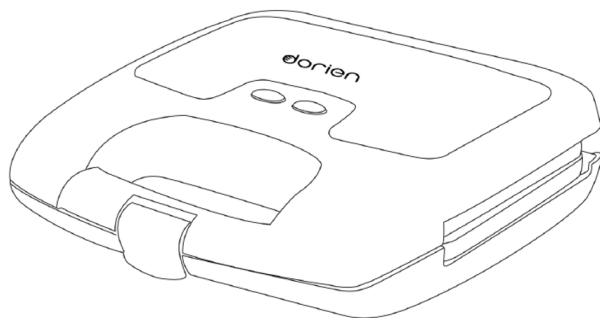

General Safety Precautions


1. Please read this instruction booklet carefully before operating the appliance.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
3. Children should be supervised to ensure that they do not play with the appliance.
4. This appliance is intended for household use only. Do not use it for commercial purposes.
5. Place the appliance on a stable, flat, and heat-resistant surface during operation.
6. Do not touch hot surfaces. Use the handle when opening or closing the appliance.
7. To protect against electric shock, do not immerse the appliance, power cord, or plug in water or any other liquid.
8. Close supervision is necessary when the appliance is used by or near children.
9. Keep the appliance and its cord out of reach of children.
10. Unplug the appliance from the power outlet when not in use and before cleaning. Allow it to cool completely before handling or cleaning.
11. Do not operate the appliance if the power cord or plug is damaged, or if the appliance has malfunctioned or been damaged in any manner.

12. Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
13. Do not place the appliance on or near a hot gas burner, electric burner, or in a heated oven.
14. Do not use accessories or attachments not recommended by the manufacturer.
15. Do not leave the appliance unattended while in operation.
16. Steam may be released during cooking. Keep hands and face away from the appliance when opening the lid.
17. Do not use metal utensils, knives, or abrasive cleaning tools on the cooking plates, as they may damage the non-stick coating.

Specification

MODEL:	DER-102
POWER:	220-240V~
RATED VOLTAGE:	700-800W
FREQUENCY:	50/60Hz

Parts Identification

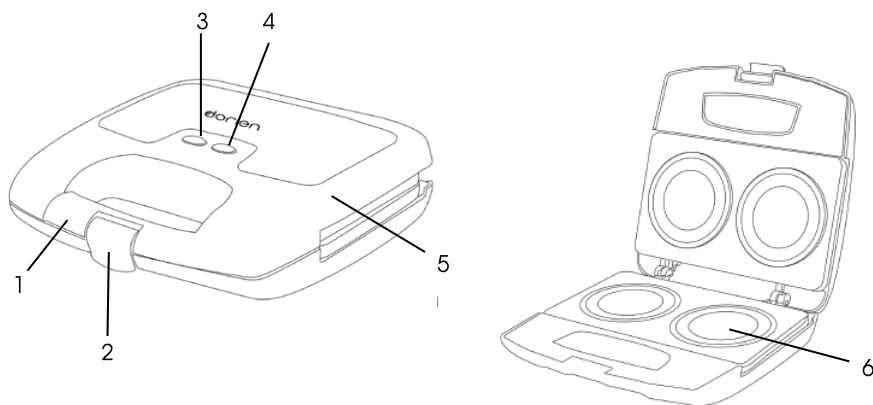

1.	Cool-Touch Handle	4.	Ready Indicator Light (Green)
2.	Handle Latch	5.	Housing
3.	Power Indicator Light (Red)	6.	Non-Stick Egg Roll Cooking Plate

Before First Use

1. Remove all packaging materials from the appliance.
2. Wipe the cooking plates with a soft damp cloth.
3. Lightly grease the cooking plates with a small amount of butter, margarine, or cooking oil.
4. During the first use, a slight odor or smoke may occur. This is normal and will disappear after a short period.
5. Do not consume the first egg roll prepared, as it may contain residues from the manufacturing process.

Operating Instructions

1. Place the appliance on a stable, heat-resistant surface.
2. Insert the plug into a suitable wall outlet. The **Red Power Indicator** will illuminate, indicating that the appliance is connected to the power supply.
3. Allow the appliance to preheat. When the **Green Ready Indicator** illuminates, the appliance has reached the optimum cooking temperature.
4. Open the lid fully and pour the prepared batter evenly onto the cooking plate. Avoid overfilling.
5. Close the lid and secure it with the handle latch.
6. Cook for approximately 3 minutes, or until the egg roll reaches the desired color and crispness.
7. Carefully remove the cooked egg roll and immediately roll it around a clean rolling stick or cylindrical mold while still warm.
8. Allow the egg roll to cool and harden before removing it from the mold.
9. Remove cooked egg rolls using a plastic, silicone, or wooden utensil only. Do not use metal utensils as they may damage the non-stick coating.
10. After cooking is completed, switch off the power and unplug the appliance from the wall outlet.
11. Allow the appliance to cool completely before cleaning or storing.

EGG ROLL RECIPE

Ingredients

- 100 g Rice Flour
- 100 g Fine Flour
- 200 g Icing Sugar (Powdered Sugar)
- 250 g Coconut Milk
- 5 Eggs

Care and Cleaning

Important: Always unplug the appliance and allow it to cool completely before cleaning.

1. Wipe the cooking plates with a soft cloth or sponge dampened with warm, soapy water.
2. Dry all surfaces thoroughly before storing.
3. For stubborn food residues, use a non-abrasive plastic scrubbing pad.
4. Wipe the cooking plates with a clean damp cloth to remove any remaining detergent.
5. Never immerse the appliance, power cord, or plug in water or any other liquid.
6. Do not use abrasive cleaners, steel wool, metal brushes, or harsh scouring pads, as these may damage the non-stick coating and exterior finish.

Distributed by:
SEGA APPLIANCES (M) SDN. BHD.
76, Jalan Tasik Prima 2/2, Taman Tasik Prima,
47150 Puchong, Selangor, Malaysia
Tel: +6014-2895236