


dorien

2 IN 1 GRILL & POT

INSTRUCTION MANUAL

MODEL: DGP-202

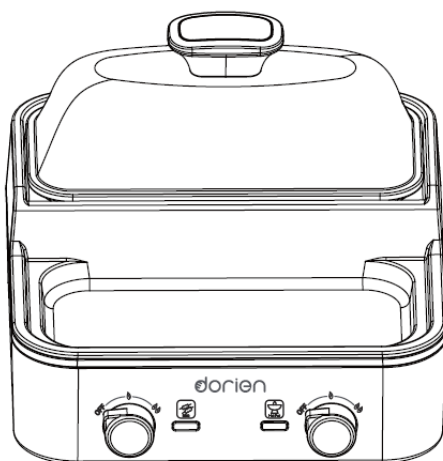

General Safety Precautions


1. Please read this instruction booklet carefully before operating the appliance.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
3. Children should be supervised to ensure that they do not play with the appliance.
4. This appliance is intended for household use only.
5. Do not use the appliance outdoors or on wet surfaces.
6. Always handle the plug and appliance with dry hands.
7. Do not immerse the main body, power cord, or plug in water or any other liquid to avoid the risk of electric shock or short circuit.
8. Do not operate the appliance if any parts are damaged, missing, or defective.
9. Do not leave the appliance unattended while it is connected to the mains power supply.
10. Always unplug the appliance before cleaning or maintenance. Allow at least 30 minutes for cooling after use.
11. Ensure that the voltage rating corresponds to the rating label of the appliance.
12. Use only accessories supplied or recommended by the manufacturer.
13. If the power cord is damaged, it must be replaced by a qualified service agent to avoid hazards.

14. Keep the power cord and appliance away from heat sources and sharp edges.
15. Always place the appliance on a stable, flat, and heat-resistant surface.
16. Hot steam is released during operation. Keep hands and face away from the steam outlet.
17. The appliance surfaces may become hot during operation. Avoid direct contact.
18. Do not move the appliance while it is in operation.
19. Avoid touching hot surfaces to prevent burns or injury.
20. Switch off the appliance and unplug it from the mains before disconnecting. Do not pull the power cord.
21. Store the appliance in a dry place away from direct sunlight and high humidity.
22. Always unplug the appliance after use and before cleaning or maintenance.
23. Ensure the appliance has completely cooled before cleaning or storage.
24. Keep the appliance away from flammable materials during operation.
25. During use, the cooking surface, housing and glass lid become extremely hot.
26. Avoid touching hot surfaces. Use the handles and knobs only.
27. Keep hands and face away from escaping steam to prevent burns.

Specification

MODEL:	DGP-202
POWER:	1200 – 1400W
FREQUENCY:	50/60Hz
RATED VOLTAGE:	220-240V~

Parts Identification

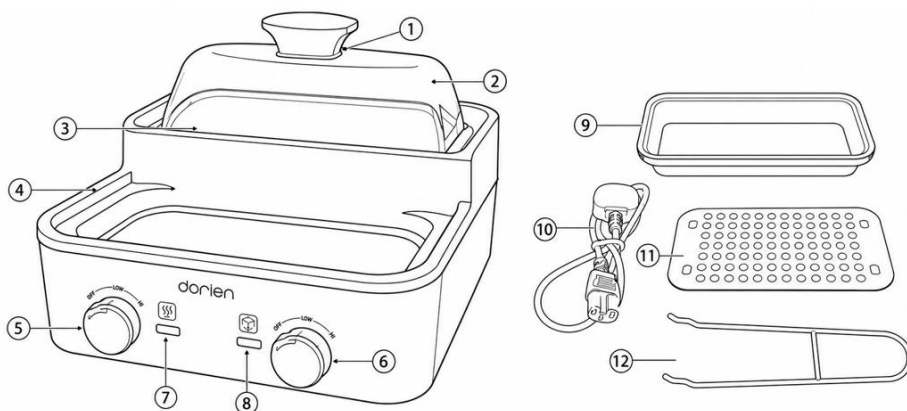

1.	Lid Handle	7.	Front Indicator Light
2.	Heat-Resistant Glass Lid	8.	Rear Indicator Light
3.	Rear Cooking Area	9.	Multi -Purpose Tray
4.	Front Cooking Area	10.	Power Cord
5.	Front Temperature Control Knob	11.	Perforated Steam Plate
6.	Rear Temperature Control Knob	12.	Steam Plate Fork

Before First Use

1. Remove all packaging materials and labels.
2. Wash the cooking area, glass lid, steam plate, and multi-purpose tray with warm water, mild detergent, and a soft sponge. Dry thoroughly.
3. Connect the detachable power cord to the appliance, then plug the power plug into a suitable wall outlet.

Important Notes:

- The appliance may emit some smoke and characteristic odour upon first use. This is normal and will dissipate shortly.
- It is recommended to connect the appliance directly to a wall socket. If an extension cord or multi-socket adapter is used, ensure it is rated for at least 1500W to prevent overheating and reduce the risk of fire.

Operating Instructions

1. Insert the detachable power cord firmly into the appliance socket.
2. Plug the power plug into a properly grounded electrical outlet.
3. Ensure both the **Front Cooking Zone** and **Rear Cooking Zone** control knobs are in the **OFF** position before switching on.
4. Turn the desired control knob to the required heat setting.
5. Preheat the selected cooking zone for approximately **1 minute**.

Important Notes:

- The **Front** and **Rear** cooking zones operate independently.
- Either cooking zone may be used separately or simultaneously.

- The indicator light illuminates during heating, indicating that the appliance is operating.
6. After preheating, place the ingredients into the front or rear cooking area.
 7. Adjust the temperature control knob to the desired heat level according to your recipe.
 8. Monitor the food throughout the cooking process.

Important Notes:

- The cooking surface is coated with a non-stick coating.
 - Use only wooden, silicone or heat-resistant plastic utensils.
 - Never use metal utensils or sharp objects, as they may damage the non-stick coating.
9. After cooking, turn both control knobs to the **OFF** position.
 10. Unplug the appliance from the electrical outlet.
 11. Allow the appliance to cool completely before cleaning or storing.

Care and Cleaning

1. Always unplug the appliance before cleaning.
2. Allow the appliance to cool completely.
3. Do not immerse the appliance or power cord in water.
4. Do not use sharp metal objects to scrape food residue from the cooking surface.
5. The cooking surface is not removable. Wipe away food residue using a soft damp cloth or sponge.

6. Wash gently with mild detergent if necessary.
7. The power inlet should be protected from water ingress. If it becomes wet accidentally, it must be wiped dry immediately to avoid the risk of electric shock during use.
8. Wipe dry with a soft cloth.
9. Do not subject the glass lid to severe impact.
10. Do not place a hot lid into cold water.

Troubleshooting

If the appliance does not operate normally, check the following before contacting customer service.

Problem	Possible Cause	Solution
Indicator light does not illuminate	Power plug not connected	Ensure the power plug is securely connected.
	Detachable power cord not fully inserted	Reinsert the detachable power cord securely.
	Faulty switch or indicator light	Contact the authorized service center.
Indicator light turns OFF during cooking	Overheat protection has activated	This is normal. The appliance will resume operation after cooling.

If the problem persists, contact the authorized service centre.

Warning: Never attempt to disassemble, repair or modify the appliance yourself.

Distributed by:
SEGA APPLIANCES (M) SDN. BHD.
76, Jalan Tasik Prima 2/2, Taman Tasik Prima,
47150 Puchong, Selangor, Malaysia
Tel: +60-14-2895236