


dorien

AIR FRYER

INSTRUCTION MANUAL

MODEL: DAF-100

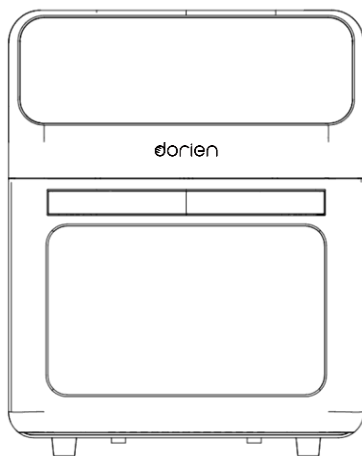

General Safety Precautions


1. Please read this instruction booklet carefully before operating the appliance.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
3. Children should be supervised to ensure that they do not play with the appliance.
4. This appliance is intended for household use only.
5. Do not use the appliance for purposes other than its intended use.
6. Never leave the appliance unattended while operating.
7. Place the appliance on a stable, flat, and heat-resistant surface.
8. Cleaning and maintenance must not be carried out by children unless they are over 8 years old and supervised.
9. Keep the appliance and power cord out of reach of children under 8 years old.
10. Before connecting the appliance, ensure that the voltage and frequency match the rating label.
11. Always connect the appliance to a grounded/earthed socket.
12. Unplug the appliance when not in use and before cleaning.
13. Do not use damaged power cords or plugs.
14. If the power cord is damaged, it must be replaced by the manufacturer or qualified personnel.

15. Never plug or unplug the appliance with wet hands.
16. Do not immerse the appliance, cord, or plug in water or other liquids.
17. Keep the power cord away from hot surfaces, sharp edges, and open flames.
18. Do not wrap the cord around the appliance.
19. If using an extension cord, ensure it is suitable for the appliance power rating.
20. Accessible surfaces may become very hot during operation.
21. Do not touch the frying pan, air outlet, or interior surfaces during or immediately after use.
22. Hot steam and air are released from the air outlet during operation. Keep hands and face away.
23. Do not cover the air inlet or outlet.
24. Leave at least 10 cm of free space around the appliance.
25. Do not overfill the frying basket with oil.
26. Immediately unplug the appliance if dark smoke appears.

Specification


MODEL:	DAF-100
POWER:	220-240V~
RATED VOLTAGE:	1350W
FREQUENCY:	50-60Hz

Parts Identification

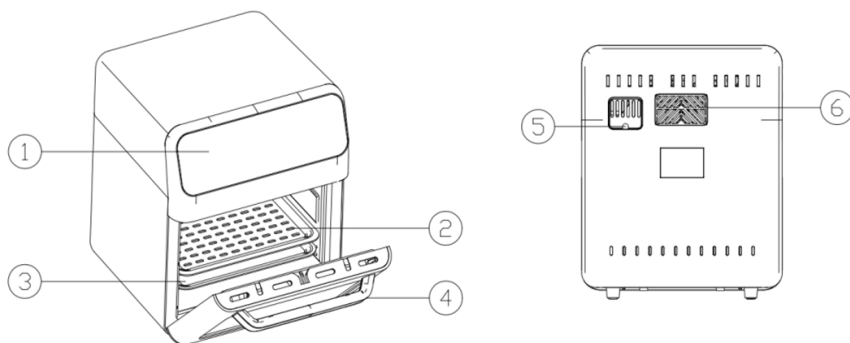

1.	Control Panel/Display screen	4.	Handle
2.	Frying Grill	5.	Power cord
3.	Drip Tray	6.	Air outlet

Control Panel And Display

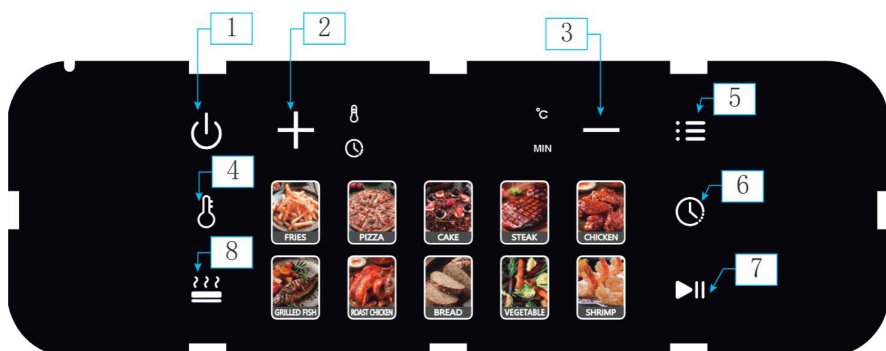

1.	Power On/off Button	5.	Menu Selection
2.	Adjustment Button "+"	6.	Timer Control
3.	Adjustment Button "-"	7.	Start/Pause Button
4.	Temperature Control	8.	Fast Heat Mode

Before First Use

1. Remove all packaging materials and stickers.
2. Clean the frying grill and drip tray with warm soapy water.
3. Wipe the inside and outside of the appliance with a soft damp cloth.
4. Ensure all electrical parts remain dry.
5. Operate the appliance empty for approximately 10 minutes to burn off manufacturing residues.
6. Ensure proper ventilation during first use. Slight smoke and odor are normal initially.

Operating Instructions

Powering On

1. Plug the appliance into a grounded wall socket.
2. The appliance enters sleep mode and the Power button lights up.

Entering Standby Mode

1. Press the **Power** button.
2. The display will cycle between cooking temperature and time.
3. If no operation occurs within 5 minutes, the appliance returns to sleep mode.

Selecting a Cooking Function

1. Press the **Menu Selection** button.
2. Select the desired food preset.
3. The selected preset light flashes.

4. The display shows the preset temperature and cooking time.

Adjusting Time and Temperature

- Press the **Time/Temperature** button to adjust settings manually.
 - **Time range:** 1–60 minutes
 - **Temperature range:** 80–200°C

Starting Cooking

1. Press the **Start/Pause** button to begin cooking.
2. You may pause cooking at any time by pressing the same button.

Pausing Operation

- Pressing **Pause** stops cooking and returns the appliance to standby mode.
- If the internal temperature exceeds 100°C, the fan continues running for 15 seconds before shutting down.

Fast Heat Function

1. In standby mode, press the Fast Heat button.
2. The appliance automatically starts:
 - Temperature: 180°C
 - Time: 15 minutes

Cooking Tips

- Do not touch the frying grill during or immediately after use.
- Smaller quantities cook faster than larger quantities.
- For crispier fries, lightly coat potatoes with oil before cooking.
- For best results, cook fresh potatoes shortly after adding oil.

Product Overview

This air fryer is designed with 10 preset cooking programs. Each program has a default time and temperature, which can be adjusted according to user preference.

Safety & Operation Features

- During cooking, when the timer reaches **50% of the set time**:
 - The appliance will beep **2 times**
 - This indicates it is time to **turn or shake the food**
- When cooking is completed:
 - The appliance will beep **5 times**
 - A **15-second cooling countdown** will appear on the display
 - The fan will operate for cooling
 - After cooling, the unit will enter **standby mode**

Preset Cooking Programs

Control Settings

Adjustable Parameters (All Programs)

Time range: 1–60 minutes

Temperature range: 80–200°C

Food	Amount (g)	Default Time (mins)	Default Temperature
Fries	100-300	20	200°C
Pizza	100-400	7	200°C
Cake	100-400	25	160°C
Steak	100-500	10	200°C

Food	Amount (g)	Default Time (mins)	Default Temperature
Chicken (wings)	100-500	20	200°C
Grilled Fish	100-500	25	180°C
Roast Chicken(whole)	1000-1500	50	200°C
Bread	100-400	10	180°C
Vegetables	100-400	15	160°C
Shrimp	100-400	15	180°C

Note

- Default settings can be modified within the allowed time and temperature ranges.
- Always ensure food is properly placed in the basket before starting cooking.
- Use the mid-cycle alert to ensure even cooking results.

Care and Cleaning

Before Cleaning

- Unplug the appliance.
- Allow it to cool for approximately 30 minutes.

Cleaning Steps

1. Wipe exterior and interior surfaces with a damp cloth.
2. Dry with a soft clean cloth.
3. Wash frying grill and oil drip tray in hot soapy water using a non-abrasive sponge.
4. Clean the heating element with a soft cleaning brush.

Important Cleaning Warnings

- Never immerse the appliance housing in water.
- Do not allow liquid to enter electrical components.
- Never use abrasive cleaners or metal scouring pads.

Important Cautions

- Keep ingredients away from the heating element.
- Never block the air vents.
- Excess oil may create a fire hazard.
- Be careful of hot steam when opening the appliance.
- Stop using the appliance immediately if dark smoke appears.

Troubleshooting

Problem	Possible Cause	Solution
Appliance does not work	Not plugged in	Plug into a grounded wall socket
Food not cooked properly	Basket overloaded	Cook smaller batches
Food undercooked	Temperature too low	Increase temperature
	Cooking time too short	Increase cooking time
Snacks not crispy	Wrong snack type	Use oven-ready snacks or lightly oil food
Fries cook unevenly	Incorrect potato type	Use firm fresh potatoes
Fries not crispy	Excess moisture	Dry potatoes thoroughly
	Potato sticks too thick	Cut thinner sticks
	Too little oil	Add a small amount of oil

Distributed by:
SEGA APPLIANCES (M) SDN. BHD.
76, Jalan Tasik Prima 2/2, Taman Tasik Prima,
47150 Puchong, Selangor, Malaysia
Tel: +6014-2895236