



COMMERCIAL ELECTRIC RICE COOKER

INSTRUCTION MANUAL


MODEL: DRC-560 (5.6L)

MODEL: DRC-780 (7.8L)

MODEL: DRC-800 (8.0L)

MODEL: DRC-1000 (10.0L)

MODEL: DRC-1400 (14.0L)

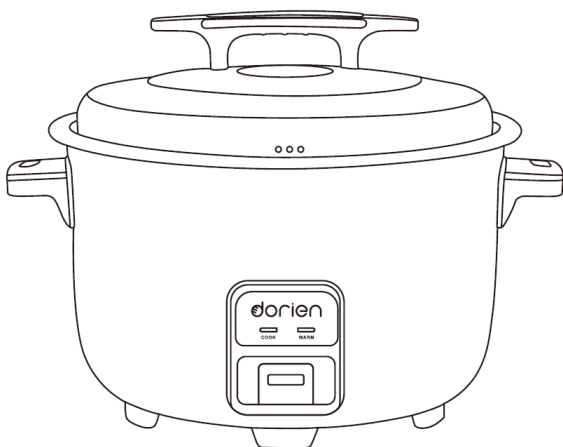

General Safety Precautions

1. Please read this instruction booklet carefully before operating the appliance.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
3. Children should be supervised to ensure that they do not play with the appliance.
4. Ensure that the main power voltage corresponds to the voltage specified on the machine.
5. Always place appliance on a sturdy surface.
6. High temperature is generated during use, which may result in burns or other injuries.
7. Do not unplug the rice cooker by pulling the power supply cord. Pull the plug out.
8. Do not allow the cord hang over edge of tables or counters, or touch hot surfaces.
9. Always keep the appliance clean. Do not let any foreign objects remain on the heating plate.
10. If the power cord is damaged, it must be replaced by the distributor. Do not attempt to replace power cord yourself.
11. Only authorized service personnel allowed to undertake repairs on electrical appliances. Repairs undertaken by unauthorized persons may result in damage to the appliance and/or accidents or injury to the user.
12. This appliance is suitable for commercial use.
13. Make sure there is ample space above and around the appliance for proper air circulation when it is in use.

14. DO NOT allow this appliance to be in close proximity to flammable materials e.g. curtains, wall coverings, clothing, dish towels etc. during use.
15. DO NOT use the Aluminum Inner Pot on a gas or electric cooktop or an open flame.
16. DO NOT leave the Rice Fork or Measuring Cup in the Aluminum Inner Pot while the unit is switched ON and in use.


PRECAUTIONS FOR RICE COOKER

- DO NOT use accessories other than those supplied with this unit. Use the Measuring Cup and Rice Fork that came with the Rice Cooker for best results.
- Before cooking, wash the rice in a separate bowl to avoid damaging the Aluminum Inner Pot.
- The Rice Cooker will not function when the Aluminum Inner Pot is not placed inside the Outer Body. Make sure the Aluminum Inner Pot is placed properly.
- Keep the base of the Aluminum Inner Pot and the surface of the Heating Plate clean and dry.
- Always check to make sure that there aren't any foreign objects on or near the Heating Plate to avoid the risk of appliance malfunction.
- DO NOT forcibly press down the Power Switch to turn on the appliance. If it is difficult to engage the Switch, check for incorrect placement of the Aluminum Inner Pot or if there are foreign objects on the Heating Plate.

Specification

Model	Capacity	Power	Rated Voltage	Frequency
DRC-560	5.6L	1950W	220-240V~	50/60Hz
DRC-780	7.8L	2250W	220-240V~	50/60Hz
DRC-800	8.0L	2500W	220-240V~	50/60Hz
DRC-1000	10.0L	2800W	220-240V~	50/60Hz
DRC-1400	14.0L	2800W	220-240V~	50/60Hz

Parts Identification

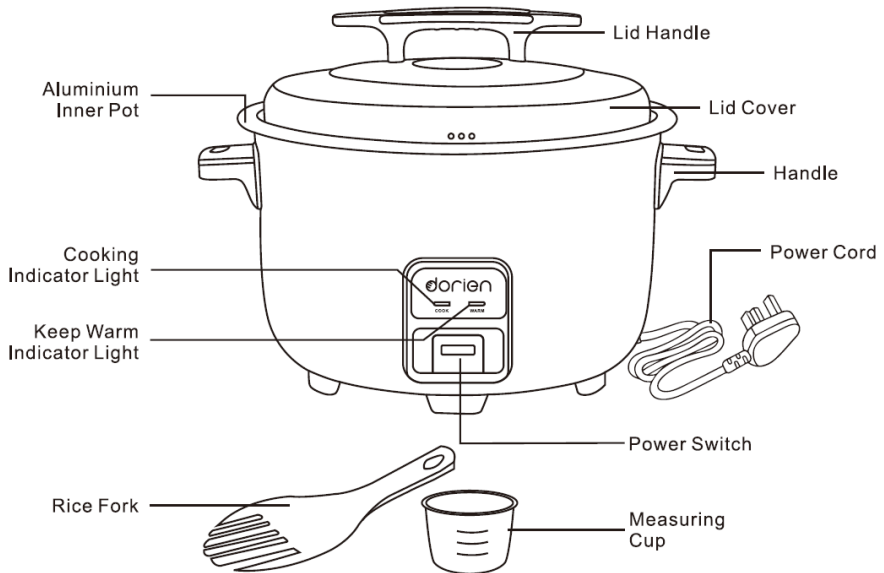

Operating Instructions

The minimum and maximum capacity for rice cooking for this appliance is as follows:

Model	Capacity (Liters)	Minimum Rice Cooking	Maximum Rice Cooking	Approx. For person	Inner Pot Water Level Scale
DRC-560	5.6L	15 cups	35 cups	35	Markings from 15-35 cups
DRC-780	7.8L	10 cups	42 cups	42	Markings from 15-35 cups
DRC-800	8.0L	25 cups	45 cups	45	Markings from 25-45 cups
DRC-1000	10.0L	20 cups	60 cups	60	Markings from 20-60 cups
DRC-1400	14.0L	30 cups	76 cups	76	Markings from 30-76 cups

COOKING RICE

1. Measure the amount of rice needed with the measuring cup provided. Wash the rice in a separate bowl to avoid damage to inner pot.
2. Put the washed rice into the inner pot and add water as required. For example, if 15-cup of rice is used, the water level should be at the "15cup" marking on the inside of the inner pot.
3. The water level may need adjustment depending on the freshness or quality of the rice. For example, less water is needed for a new crop of rice; and more water is needed for older rice.

4. Wipe the exterior of the inner pot with a clean cloth before placing the inner pot in the cooker body. Rotate the inner pot so that it is sitting evenly on the heating element. Make sure that there are no foreign objects on the bottom surface of the inner pot or on the heating element of the cooker.
5. Make sure the rice is distributed evenly in the inner pot.
6. Cover the inner pot with the lid properly. Insert the plug on the power cord into a household electrical power outlet.
7. Turn on the power supply and the cook indicator light will be on. The rice cooking process has not started at this stage.
8. To start the cooking process, you must press down the cooking switch and the cooking indicator light will be on to indicate that rice cooking is in progress.
9. When the rice is cooked, the cooker will automatically switch to the keep warm function and the keep warm indicator light will be on. The cooker will stay in keep warm function until the power supply is switched off.
10. For best results, leave the lid on for about 15 more minutes under keep warm function.
11. Open the Lid Cover to loosen and fluff the cooked rice with the Rice Fork provided. This must be done whether the cooked rice is to be served at once or kept warm.
12. Do not keep the cooked rice in the keep warm function for more than 5 hours. Otherwise, the rice may become hard and dry.
13. To stop the keep warm function, simply switch off the power supply and remove plug of power cord from the household electrical power outlet.

KEEP WARM

1. The KEEP WARM function will automatically start after the COOKING process is finished, and will remain activated until power is switched OFF.
2. Once rice is cooked, avoid leaving the unit on KEEP WARM function for more than 5 hours; doing so will not damage the appliance but the cooked rice may become hard and dry, discoloration may occur, and a burnt smell may even be detected.
3. For best results, keep the unit on KEEP WARM for at least 15 minutes, before switching OFF to deactivate the function.

Care and Cleaning

1. Always unplug the appliance after use and allow the appliance to cool down completely.
2. Wipe the exterior surfaces with a damp cloth. Do not flush the whole appliance with water.
3. Use sponge and neutral dishwashing liquid to clean the Aluminum Inner Pot and Rice Fork. Soaking for a few hours or overnight in soapy water may be necessary to remove crusted rice. Rinse thoroughly with lukewarm water and wipe with soft cloth or leave to dry.
4. Do not use abrasive sponge, scouring pads or stiff brush to clean the appliance.
5. Rice and other materials may stick to the Heating Plate; use a non-abrasive cleaning pad to clean it of all stains.
6. Dry it thoroughly before assembling and storing.



This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Distributed by:

SEGA APPLIANCES (M) SDN. BHD.

76, Jalan Tasik Prima 2/2, Taman Tasik Prima,
47150 Puchong, Selangor, Malaysia

Tel: +6014-2895236